

WARRANTY

THIS DRYER CARRIES A 2 YEAR WARRANTY

This dryer has been carefully inspected to assure that it is free from all defects in materials and workmanship. If, for any reason other than misuse, abuse, or neglect, this dryer fails to operate from date of purchase by the original owner, the complete dryer, or defective part, may be returned to the factory for repair or replacement at no charge, upon approval.

We bear no responsibility for any outside labor or other outside charges due to downtime associated with replacement or repair of this dryer under this warranty. Any service or repairs done by any entity other than Speedy Dryer, with the exception of those performed by the owner of the dryer as set forth in this manual, invalidate this warranty and all promises made herein.

Please keep the original dryer box for shipping your unit to us for service.

More information on servicing your dryer can be found on our website www.speedydryer.com/service.html or give us a call at the number below.

Speedy DRYER



www.speedydryer.com
OR CALL US AT 800-822-6628



Speedy Dryer
1 Line Street, Nanticoke PA 18634
sales@speedydryer.com

V-1000X

INSTRUCTIONS AND WARRANTY

Congratulations!

You have just purchased the finest, longest lasting and most reliable dryer on the market. With proper maintenance, this investment will provide you with years and years (and years) of service. Please review everything in this guide before you continue.

WARNINGS AND IMPORTANT INFORMATION:

- **YOUR SPEEDY DRYER IS MANUFACTURED FOR COMMERCIAL USE AND ARRIVES COMPLETELY ASSEMBLED EXCEPT FOR THE STAND. DIRECTIONS FOR ASSEMBLING THE STAND CAN BE FOUND ON THE BOTTOM OF THE OPPOSITE PAGE.**
 - **THIS UNIT IS INTENDED TO BE USED IN TANDOM WITH THE GROOMER BY ITS SIDE AND SHOULD NOT BE LEFT ON WHILE UNATTENDED. OR BE USED IN A CAGE DRYING SCENARIO.**
 - **TO PROVIDE CONTINUED PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLETS ONLY.**
 - **IT IS NOT RECOMMENDED THAT EXTENSION CORDS BE USED WITH YOUR DRYER; LONGER CORDS ARE AVAILABLE TO BE INSTALLED BY THE FACTORY. REPLACE OR REPAIR DAMAGED CORDS IMMEDIATELY.**
 - **THE APPLIANCE SHOULD BE STORED IN A DRY PLACE AND LOCATED WHERE IT IS NOT LIKELY TO BE DAMAGED.**
 - **YOUR WARRANTY INFORMATION CAN BE FOUND ON THE BACK PAGE.**
- PLEASE KEEP IN MIND:**

- Read all instructions before using appliance.
- To protect against electrical hazards, do not immerse in water or any other liquid and do not use while bathing.
- Close supervision is necessary when any appliance is used near children.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Always keep cord away from heated surfaces.
- Do not leave appliance unattended when it is operating.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use appliance only for its intended use. The use of attachments not sold or recommended by the manufacturer may cause hazards.
- Connect to properly grounded outlets only. See the Warnings and Important Information section above.
- Do not drop or insert any object into any opening or duct as this may cause an electrical hazard.
- Do not block air openings.
- Do not direct air flow toward eyes or other heat sensitive areas.

MAINTENANCE YOU CAN PERFORM:

(Before performing any of these maintenance actions, please ensure your dryer is unplugged.)

- Remove air intake screen and use the blower end of a vacuum to remove as much hair and dirt as possible. BE VERY CAREFUL NOT TO STICK ANYTHING INTO THE DRYER. Clean as often as necessary.
- A reserve oil supply is sealed in the motor, thus eliminating the need for frequent oiling. After 12 months or 2,000 hours of operation, dryer should be lubricated. NOT ALL MOTORS REQUIRE OILING - PLEASE CONTACT SPEEDY DRYER FOR ASSISTANCE.
- To permit free movement of nozzle, place dryer in down position and put a few drops of oil in between the moving parts of the swivel.
- We recommend having your dryer serviced by the factory every 12 mos. More information is available at www.speedydryer.com/service.html

IF THE DRYER ISN'T RUNNING PROPERLY:

- Make sure your appliance is securely plugged into a working outlet.
- Test the outlet by plugging in another appliance you know to be working.
- Make sure all breakers and switches are turned on.
- If the appliance is producing heat but not air, the motor may not be moving. Press the (red) motor reset button on the motor body.
- If the air flow is minimized, your dryer may be blocked and in need of cleaning.

STILL NOT RUNNING PROPERLY? GIVE US A CALL. WE NOW OFFER SPEEDY RAPID REPAIR - ITS QUICK AND CONVENIENT. WE'LL SEND YOU EVERYTHING YOU NEED TO PACK UP YOUR DRYER FOR SERVICE. WHEN ITS READY TO GO, UPS WILL COME BY AND PICK IT UP - NO WORRIES AND NO NEED TO LEAVE YOUR SHOP. RAPID REPAIR PLUS EVEN OFFERS A LOANER DRYER IF YOU JUST CAN'T GO WITHOUT.

STAND INSTRUCTIONS

1. Install five (5) legs into the star base.
2. Tighten bolts.
3. Position dryer so nozzle and stem are in line with one another.
4. Insert dryer stem into stand tube.

Again, Congratulations. We are sure you're going to love your new Speedy Dryer. Be sure to like us on Facebook and follow us on Twitter for support, offers, and tips on how to make the most of your new Speedy Dryer.